

DISCcatcher[®] **SPORT** Disc Golf Target

PARTS LIST

one base
one basket
one chain support with
chain assembly
one short (22") pole
one long (29") pole
four screws
1 Innova screwdriver

Just 5 parts and 4 easy steps.

ASSEMBLY INSTRUCTIONS

STEP 1. Put the base portion on the ground (outside ring down) and insert the shorter (22") pole into its sleeve...

... tighten the base screw.

STEP 2. Slide the basket, open end up, onto the short pole...

... tighten the bottom basket screw.

STEP 3. Insert the longer (29") pole into the top end of the basket sleeve...


... tighten the upper basket screw.

STEP 4. Pick up the chain support with chain assembly. Grab the ring where all the chains attach and drop it over the longer pole, then put the chain rack on top of the pole.

... tighten the chain support screw.

STEP 5. Start playing! It's that easy!

This target is made for indoor or outdoor use, but prolonged exposure to weather is not recommended.

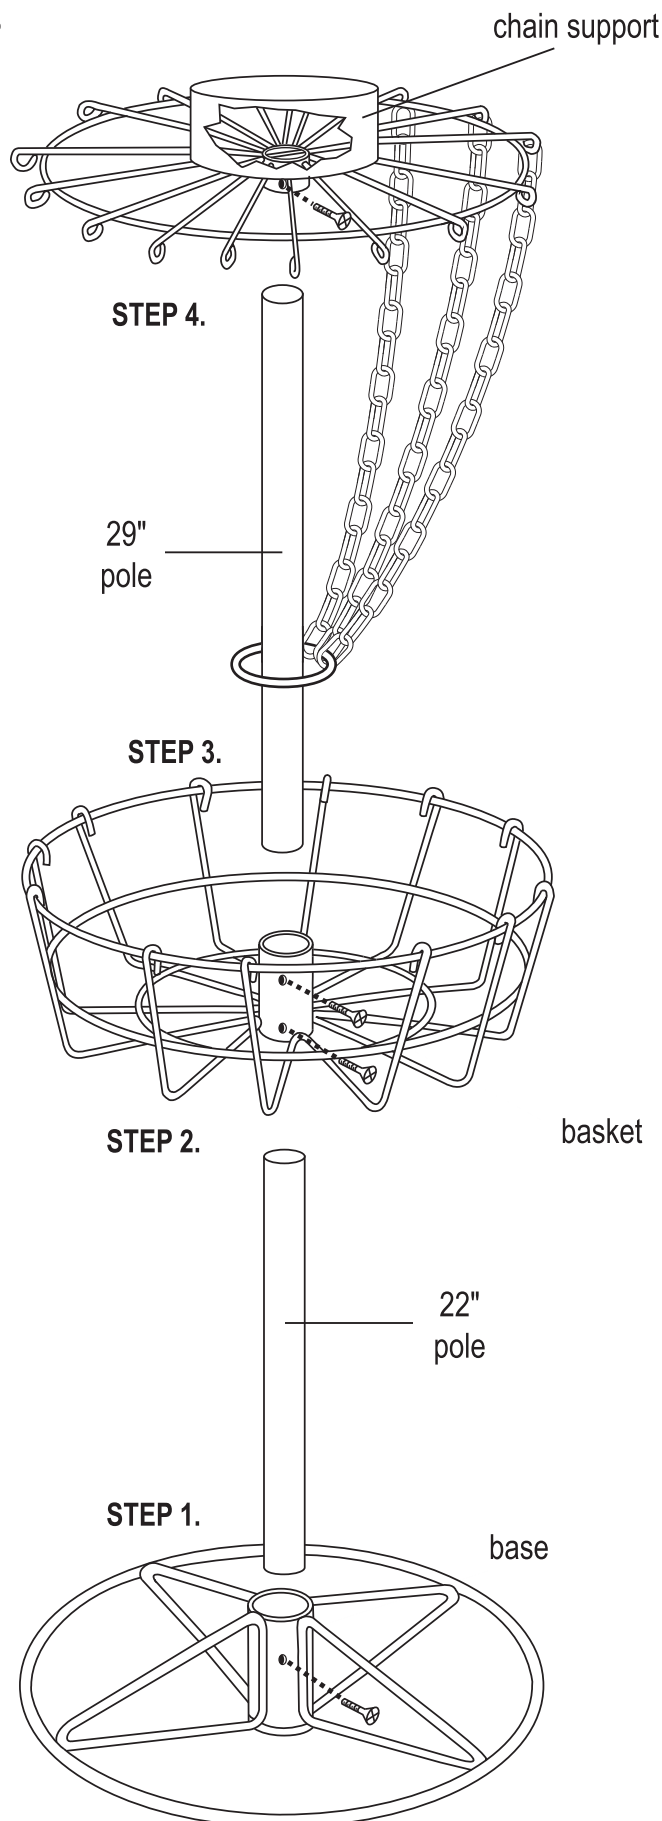

**Innova West (800) 408-8449 • info@innovadiscs.com
Innova East (800) 476-3968 • info@innovadiscgolf.com**